

EM-11100-SSXX-1

10G Base-T to 10G Base-R Media Converter

DESCRIPTIONS

10G Base-T to 10G Base-R Media Converter supports two types media for network connection such as 10GBase-T and 10GBase-FX. The bridge media converter is designed with a 10Gbase Ethernet PHY chip that connects two types segments operation smoothly. This converter can be used as standalone unit or as slide-in module to the 19" converter rack Chassis for use at a central wiring closet

Technical Specifications

Standards	1000Base-T, 2.5GBase-T, 5Gbase-T, 10Gbase-T 1000Base-X, 2500Base-X, 5GBase-R, 10GBase-R
Media Supported	1000Base-T: Cat5 UTP/STP. MAX 100m; 2.5GBase-T: Cat5e UTP/STP. MAX 50m; 5GBase-T: Cat5e UTP/STP. MAX 50m; 10G Base-T: Cat6a UTP/STP. MAX 50m;
Port Type	RJ45, SFP Slot
Work Mode	1000Base-T to 1000Base-X 2.5GBase-T to 2500Base-X 5Gbase-T to 5GBase-R 10Gbase-T to 10GBase-R
Power Supply	12V DC
Power consumption	MAX 5W
Operation Tempera tore	0°C to 55°C
Relative Humidity	5% to 80% (non-condensation)

Installing the Converter

For as a standalone unit:

- Verify the DC adapter conforms to your country DC power requirement and insert the power plug
- Connect the media cable for network connection

For as a slide-in unit:

- The slide-in Media Converter and Converter Rack Chassis should supplied only from the same source, both Media Converter Rack Chassis are built to match each other at dimension, DC jack, DC receptacle and power safety.
- Turn off the 19" converter rack power
- Locate +12V DC power jack on converter back, carefully slide in and plug to 19" rack +12V DC power receptacle
- Connect the media cable for network connection
- Turn on the converter rack power, the Power LED will light up

Wire connection, Front and Side panel

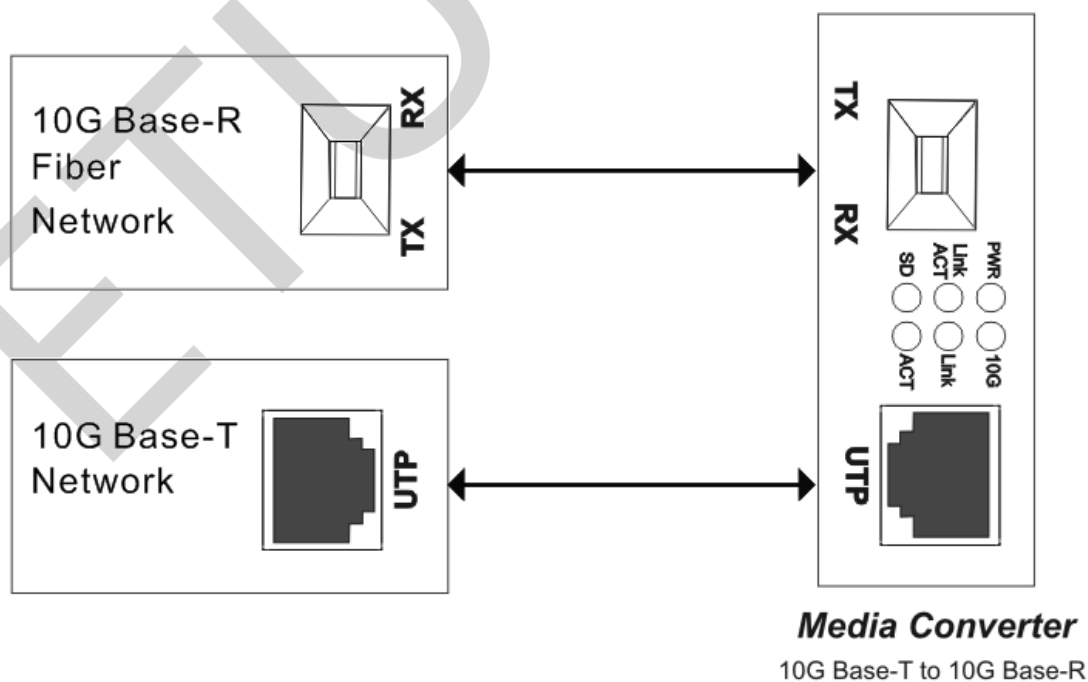


Fig:Basic Network connection

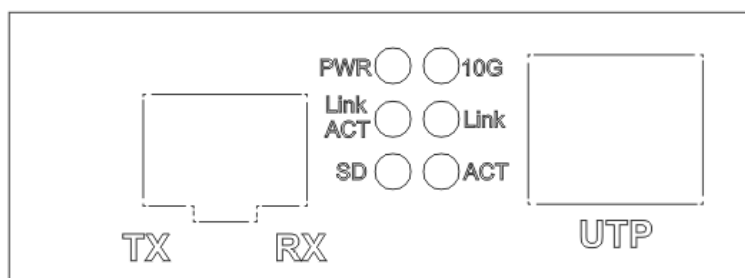

Fig.2 Converter Front Panel for external power

Fig.3 Rear panel

Check List

Before you start installing the Converter, verify that the package contains the following:

- The TP-Fiber Converter
- AC to 12V DC Power Adapter (for external models) or Power Cord (for internal models)
- The User's Manual

Please notify your local sales distributor immediately if any of the aforementioned items is missing or damaged.

LED Description

LED	Status	Description
PWR	On	Power is on and normal.
FX Link/Act	On	Connection status display for Fiber Link. “ON” indicates that Fiber link is in correct connection.
	Blink	Active status display of fiber link. “Blink” indicates packet goes through FX end.
SD	On	Fiber signal is detected.
10G	On	2.5G-10G

	Off	10/100/1000M
TX Link	On	Connection status display for electric link. “ON” indicates that electric link is in correct.
TX Act	Blink	Active Status display of fiber link “Blink” indicates packet goes through TX end.

Revision History

Version No.	Date	Description
1.0	February 18, 2019	Preliminary datasheet

Company: ETU-Link Technology Co., LTD

Production base: Right side of 3rd floor, No. 102 building, Longguan expressway, Dalang street,
Longhua District, Shenzhen city, Guangdong Province, China 518109

R&D base: Floor 4, Building 4, Nanshan Yungu Phase LI, Taoyuan Community, Xili Street, Nanshan District,
Shenzhen

Tel: +86-755 2328 4603

Addresses and phone number also have been listed at www.etulinktechnology.com.

Please e-mail us at sales@etulinktechnology.com or call us for assistance.